How to Pair with Wi-Fi Router
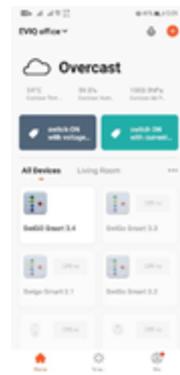
[Download the " Smart Life app" here for Android](#)

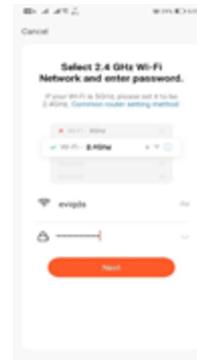[Download the " Smart Life app" here for IOS](#)

1. Open Smart Life app and Turn ON the Bluetooth and Location in your smartphone and set this as default for quick pairing.

2. In home page, top right side corner tap add symbol

3. Now select Socket(Wi-Fi) in electrical section

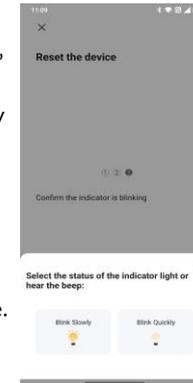4. Then enter your 2.4Ghz Wi-Fi Name and Password and tap Next
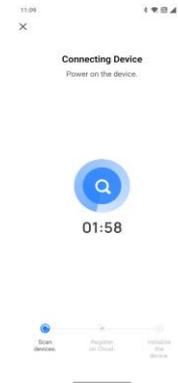

5. Tap Next in Reset the device page1

6. Press green and yellow button together until blue LED start blinking. Once its start blinking, tap Next

7. Select "Confirm the indicator is blinking rapidly" and tap Next
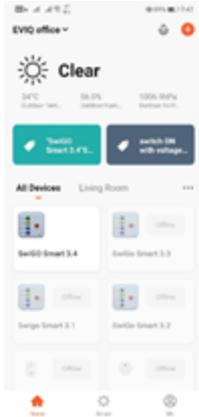8. Now device automatically connect to your router

9. Once pairing is complete press red color OFF button once in SwiGO Smart.
10. Now device ready to use.

How to create schedules
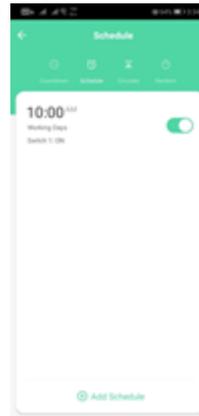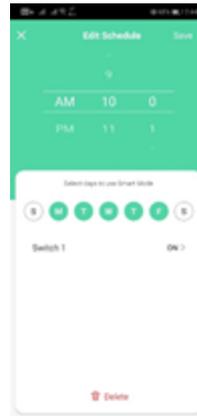
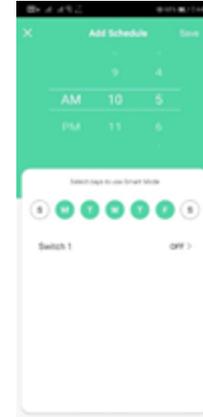1. In Home Page Select SwiGO Smart Switch

3. In Schedule Screen Tap Add Schedule

5. Again Tap Add Schedule , Set OFF time , OFF Days and make Switch1 to OFF and Tap Save

2. In ON OFF Screen Select Timer

4. In Add Schedule Screen, set ON Time , ON Days and make Switch1 to ON and Tap Save.
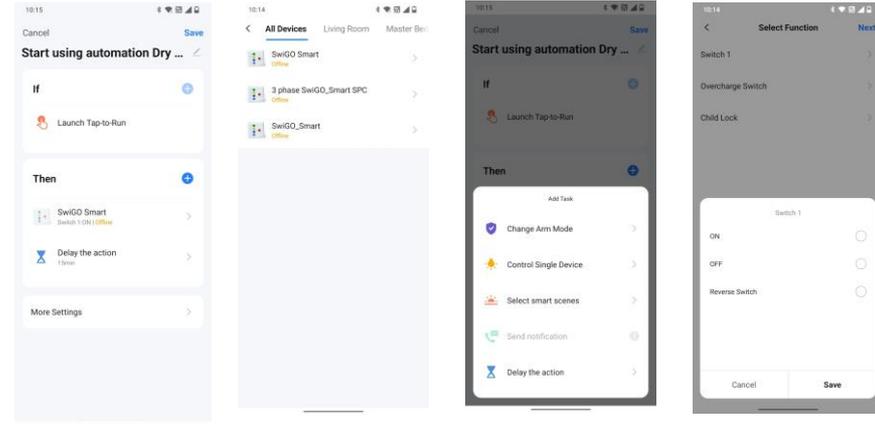

6. Now ON & OFF Time are Stored.
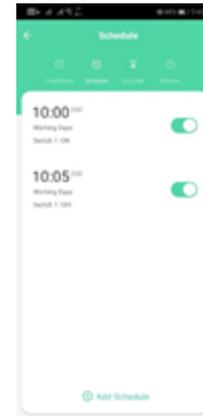
How to create scene with Tap- to-Run

In your home page, select the option Scene, then click Tap-to – Run button.

Click the Add symbol in Then option and select your device. Now click the control single device and select the switch 1 to be ON. Then save it.
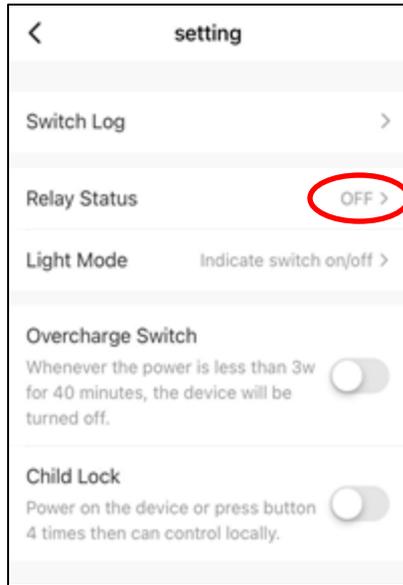
Again click Then option and set the delay time as required. Now select control single device and click the Switch1 to be off and save it.
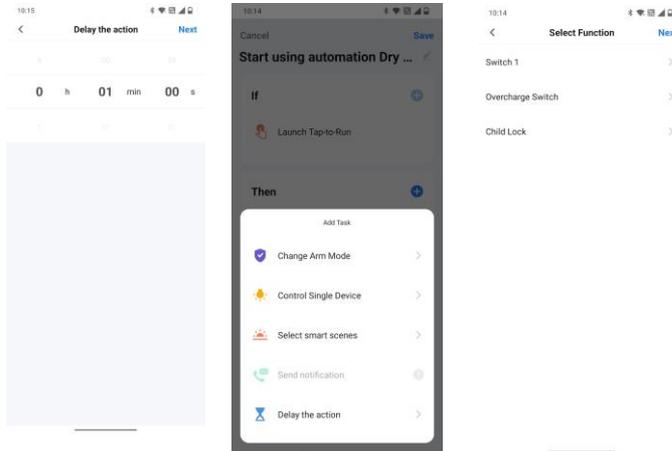
Your final results will be like this. Name the automation appropriately. It will be showed in your home page. Now you can simply Tap to make the device to perform its action.
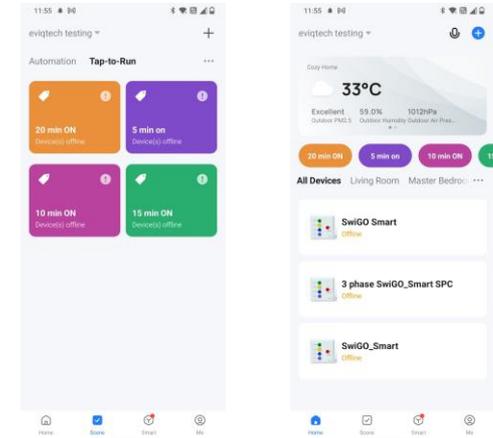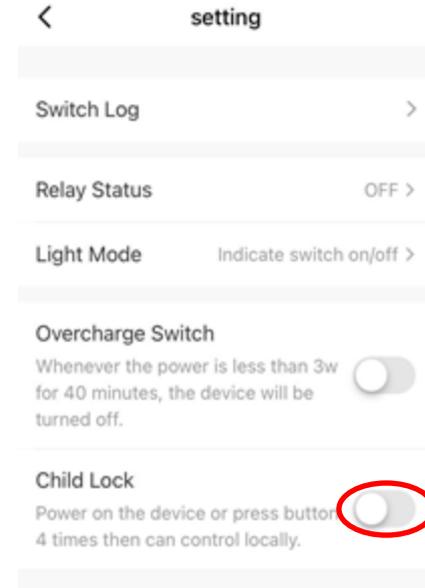
For Motor Applications Put The Relay Status To Off.

Caution: Make sure that the Relay status is in OFF condition

Child lock setting

To enable the child lock mode

Caution: If the child lock is enabled, no buttons will work on the device manually until you disable the child lock by pressing the Red button four times on a device.

Overload and Dry-Run protection

1. Switch ON the Device and get Real Time current (mA) Value from Electric Section
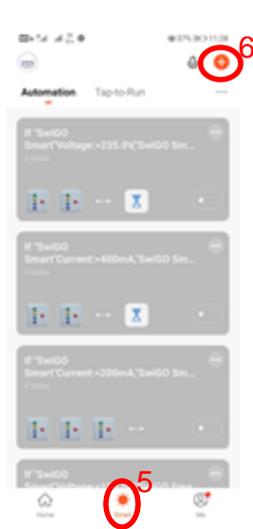
2. For Overload , Realtime current value plus 10%

3. For DRP , Realtime Current Value -10%A

4. For Example, Consider Real Time current value = 10000mA Your Overload = 10000 X 1.1 = 11000mA Your DRP = 10000 X 0.9 = 9000mA
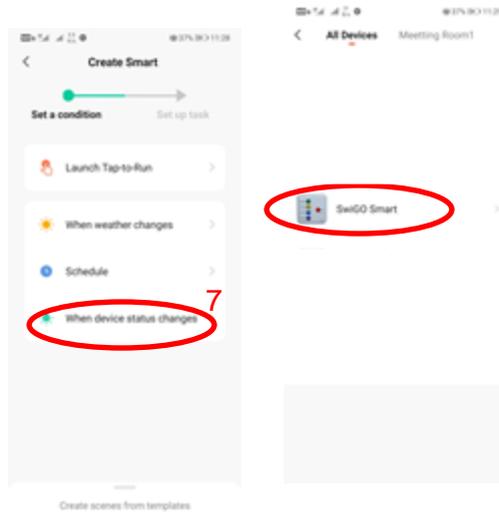
For Overload

5.Select Smart Section in Home Screen Bottom Center
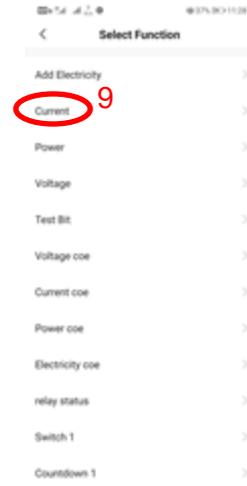6.Tap Plus Symbol top right corner

7.Tap When device status Change

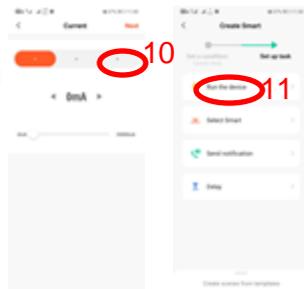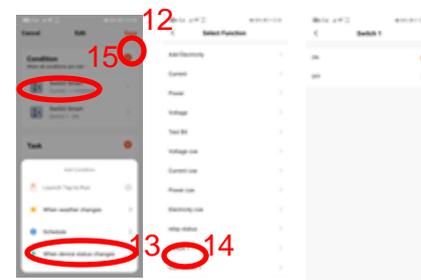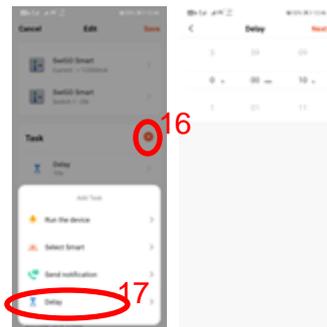8.Select SwiGO Smart From Next Screen

9.Select Current in Function

10.Tap Greater than Symbol and set Calculated Overload current
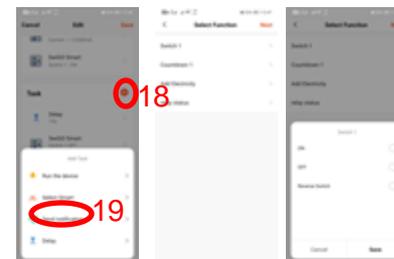11.Select "Run the device" From Next Screen and select Switch 1 and OFF

12.Tap ADD Symbol from Condition Section
13.Select When device status change
14. Next Screen and select Switch 1 and ON
15.Tap below Condition and select When All Conditions are met

16.Tap ADD Symbol from Task Section
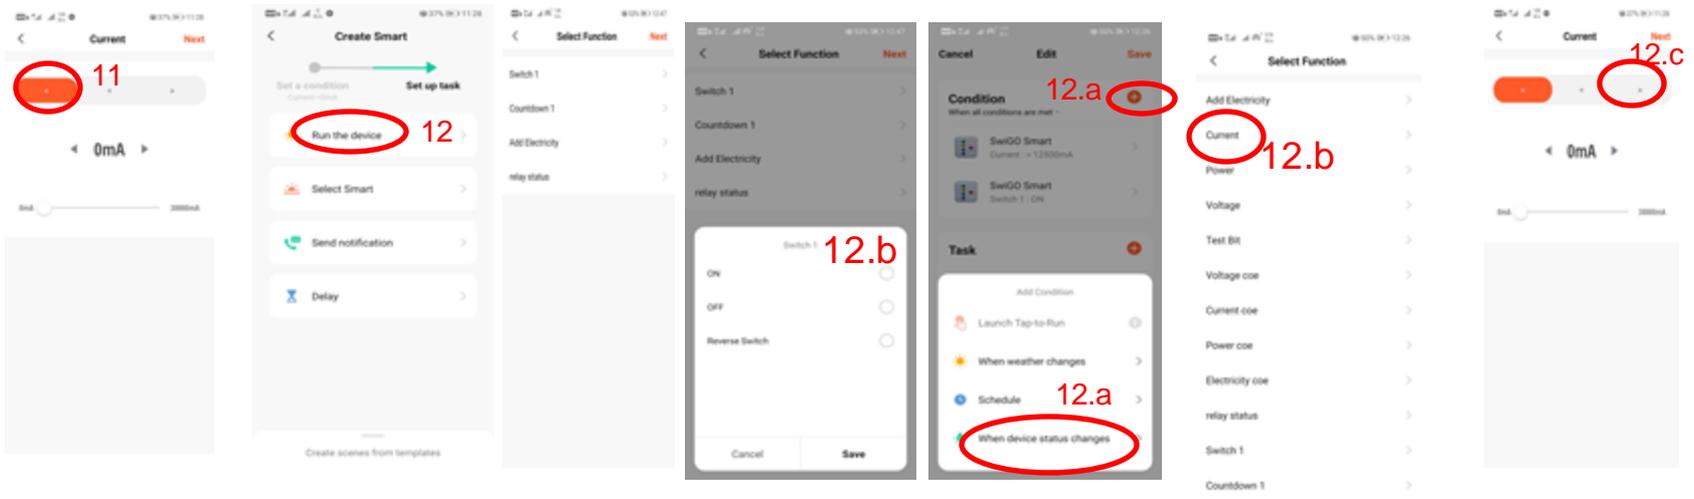17.Select "Delay" From Next Screen and set 10 seconds

18.Again tap ADD Symbol from Task Section
19.Select "Run the device" From Next Screen and select Switch 1 and OFF
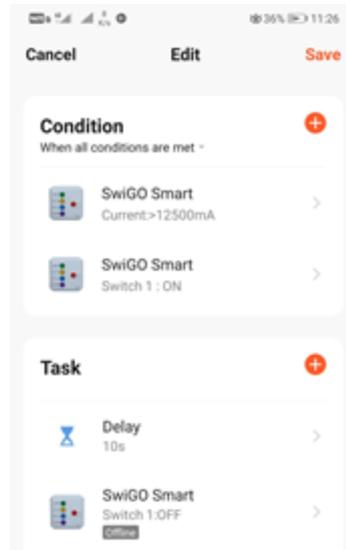
For DRP replace 10,11ᵗʰ instruction with below instruction and Repeat other step as its,

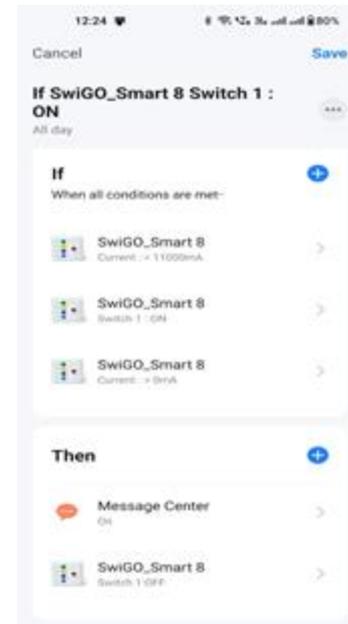10.Tap Less than Symbol and set DRP current

11.Select "Run the device" From Next Screen and select Switch
1 and OFF

Final Result
Should be Like
This.
For Overload
protection

For Dry
run
protection.

Specifications:

Description	Value
Rated voltage	250V AC 50HZ
Max Withstand voltage	440V AC
Cut-Off Voltage	<180V & >290V
DC Output for float switch	5V DC
Maximum operating current	16AX/2 HP/3kW
Suitable Box	Indian 2-Module Box
Mounting Method	Surface
Color	White
Warranty	1 year
Product weight	140 gms
Product Dimensions	87x87x45 mm